

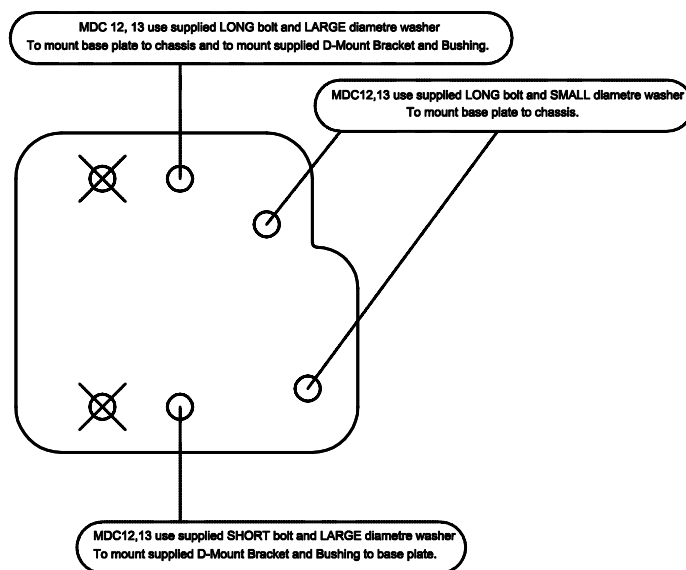
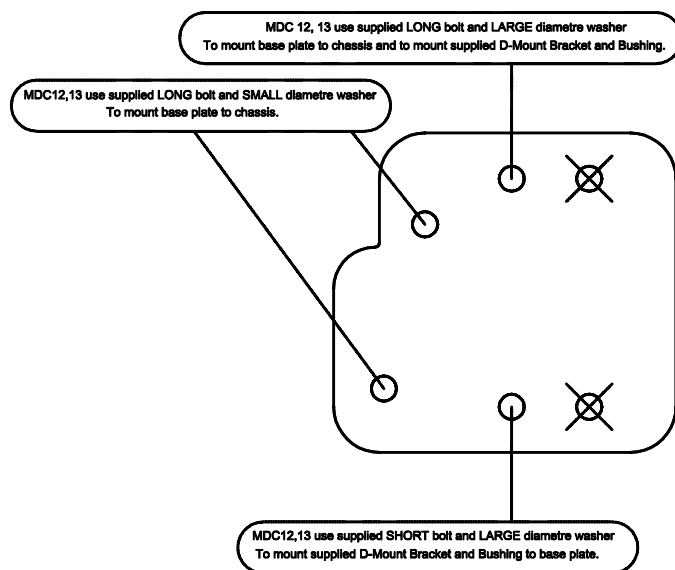


VIEW OF PLATES WHEN LOOKING FROM REAR TO FRONT OF CARAVAN MDC XT12, XT13 Model specific plate notes.

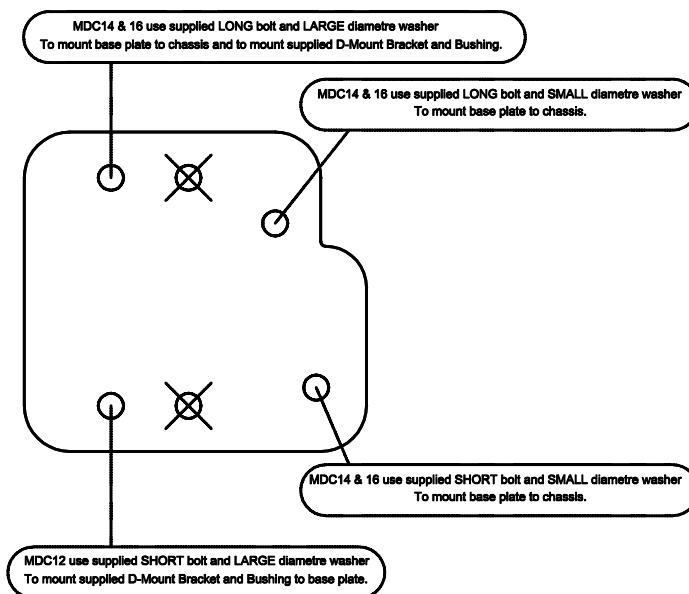

MDC XT14 & XT16 Model specific plate notes.

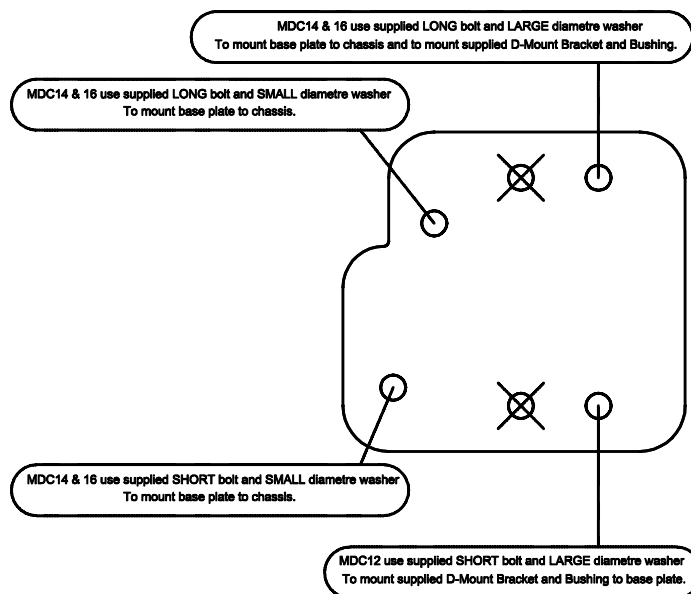

NOTE: When drilling chassis a 6mm or 7mm pilot drill makes the job much easier.

10.5mm holes give a small amount of free play to get all the bolts in place before tensioning.

After drilling the holes in the chassis to correct size a magnet should be used to remove the swarf . Using compressed air will also help remove the swarf left behind.

Apply a coating of rust inhibitor or galvanizing paint to the holes prior to base plate installation.

GripTech Industries recommends installation by a qualified trained trade technician.

Please use personal protective equipment and trade quality workshop equipment when installing our products.

GripTech Industries Pty Ltd 8/10 Bromley Road, Emu Heights NSW 2750 02 4314 6562